


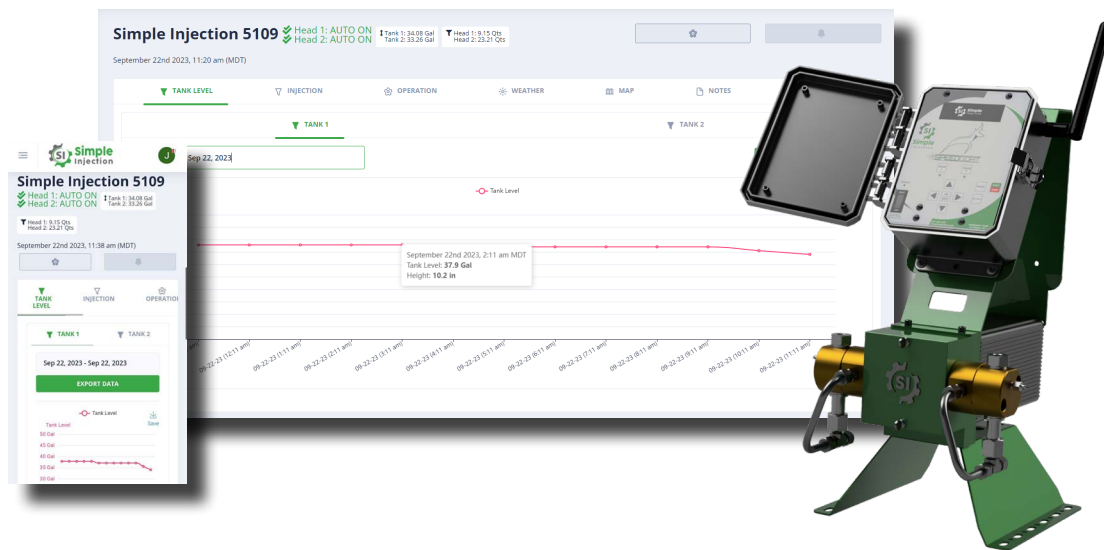

Dashboard User Guide

How to Create an Account and Add Your Pump



Creating an Account

1. Navigate to the Simple Injection Dashboard by clicking on the **DASHBOARD LOGIN** button at the top of the Simple Injection homepage at www.simpleinjection.com



2. Create a new account by clicking the **NEW USER? SIGN UP HERE** button

Note: If you already have an account, please:

- 1) log in by entering your email and password and clicking **LOG IN** or by using your Google Account by clicking **Sign in with Google**
- 2) After logging in, skip to the **Adding Your Pump to the Dashboard** section of this guide

Login

Hello! Log in with your email.

Email address:

Email is required!


Password:

[Request New Password](#)

Password is required!

Remember me

or use a provider:



3. Enter the **Name, Email Address, Password, Company, and Address** you would like to use for your account and click the **SIGN UP** button

Note: Be sure to remember your email address and password

Register a new account

Hello! Sign up with your email.

Full name:

Email address:

Password:

Company name:

Company address:

SIGN UP

Already have an account? [Login](#)

Verification Required

You must verify your email address before you can use the Dashboard.

Your email address

REQUEST VERIFICATION EMAIL

Once you verify your email, log out then log in again.


[Log Out](#)

4. Open the inbox to the email address you used for your account and open the email with **Verify your email...** in the subject line

Note: The verification email is often sent after a welcome email

Note: Be sure to check your spam if you don't see a message in your inbox


5. Click on the link in the email to verify your email address

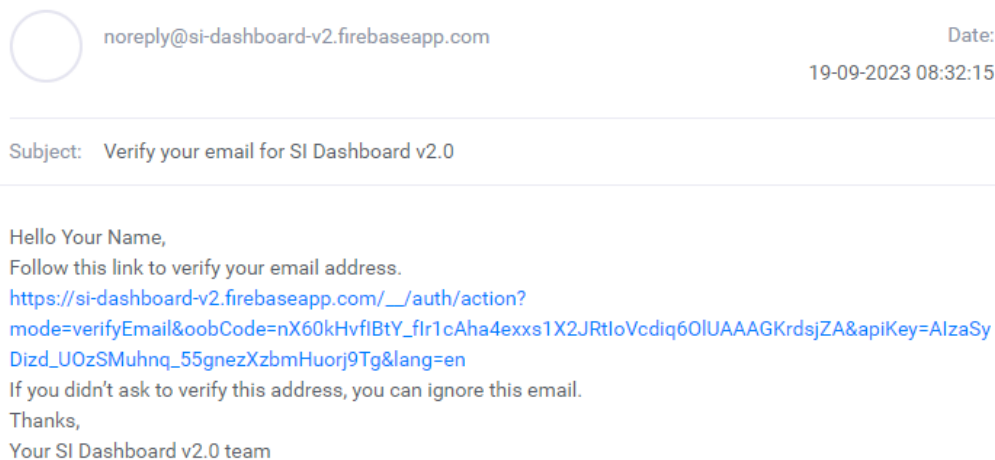

6. You can now return to the Simple Injection Dashboard and log in to your account to add your first pump


Adding Your Pump to the Dashboard

1. After logging in to the Dashboard click on **Device Management** on the left side of the screen

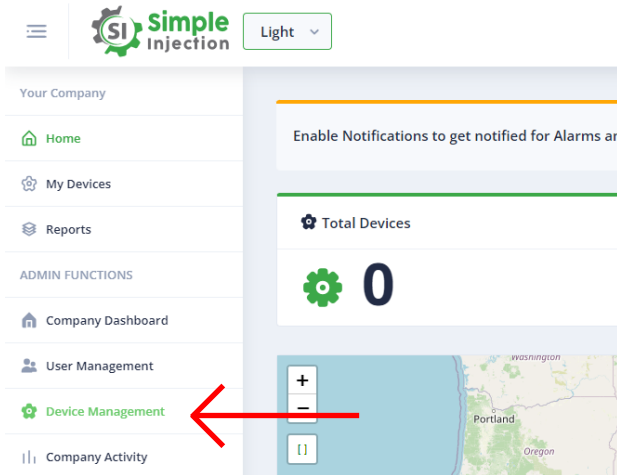

2. To add a new pump click on the **ADD NEW DEVICE** button at the top of the screen

Note: To add a new device, you will need the 12 or 15 digit IMEI number located on the inside of the front cover of your pump

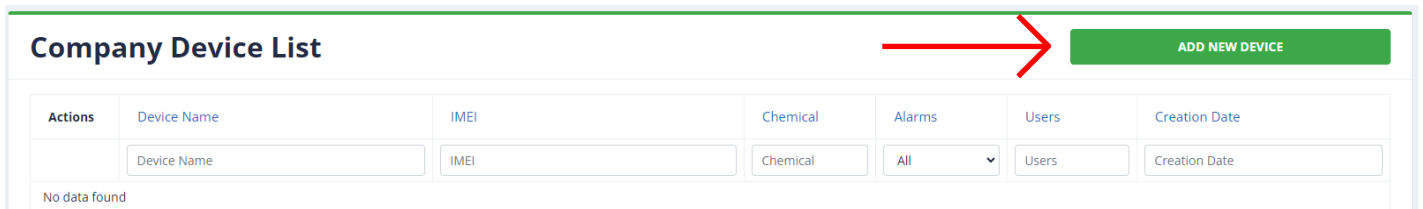

3. Enter your **Device Name** and the **IMEI** number of your pump and click **ADD DEVICE**
4. Congratulations, your pump is now added to your account
5. You can find and select your pump in either **My Devices** or **Device Management** on the left to view and/or control it using the Simple Injection Dashboard
6. Repeat the previous steps to add additional pumps

Add New Device

Device Name

Device IMEI

Company

ADD DEVICE

Company Device List

Actions	Device Name	IMEI
	<input type="text" value="Device Name"/>	<input type="text" value="IMEI"/>
	My Pump	1234567899876543

To control a device, just select (click on) its row